Gütermann



Instruction COSY BLANKET

EN

Instruction COSY BLANKET Size 130 cm x 180 cm



Materials from Gütermann

- Sew-all thread in matching colours
- Cotton fabric 145 cm wide, collection BLOOMS:
- 2.00 m flower pattern in Marsala-multicolour
- 6.50 m velvet ribbon in dark blue, 1 cm wide
- 4 fabric-covered buttons in dark blue, 15 mm wide

In addition

- 1.80 m soft fleece in Marsala, 140 cm wide
- Spray textile adhesive (optional)

Tools

- Sewing machine
- Iron
- Scissors
- Pins
- Textile marker pen
- Ruler
- Tape measure
- Set square

Cutting

- Flower pattern: 195 cm x 145 cm (incl. 1 cm seam allowance)
- Soft fleece: 180 cm x 130 cm (cut without seam allowance)

Gütermann



1. For the mitred corners fold 1 cm on the edges of the flower pattern fabric to the wrong side and iron. Then fold 6.5 cm more to the wrong side on all edges and iron again.

2. Unfold the 6.5 cm ironed edges. Now fold the edge of the fabric diagonally with right sides together from the corner and pin together. Iron the diagonal fold with the 1 cm seam allowance still folded in. Mark a line from the joining point of the 6.5 cm ironed edges at right angles to the outer fold. Prepare all 4 corners in this way. Sew along the marked lines at the corners, backstitching the beginning and end of each seam.



3. Cut away the corners to the seam and cut the points off at an angle. Iron the seam allowances apart. Cut away the seam allowance on all corners and iron apart. Turn the corners and form the points. Iron again.



4. Lay the fabric flat on the work surface with the mitred corner seam facing upwards. Lay the soft fleece on the fabric, wrong sides together so that the edges are flush with the seam edges (this works best if somebody helps you). Lift the seam edges and insert the fleece under the seam or spray the reverse of the fleece edges. Either press the adhesive edges in place so that the fleece doesn't slip or fix it in place with plenty of pins. Tack all the layers together along the 6.5 cm seam edge.

Gütermann



5. Topstitch the seam edge all around close to the edge. Then turn the blanket to the right side. Pin the velvet ribbon centrally over the sewn line, folding 1 cm over at the beginning and laying this section over the previous end. Lay the ribbon in angled folds in the corners. Topstitch on both sides close to the edge.



6. Fold approx.12 cm of velvet ribbon at an angle as a decoration at each corner and fix in place with a fabric-covered button. Cut the ends of the velvet ribbon off at an angle.

Gütermann GmbH Landstr. 1 DE-79261 Gutach-Breisgau

Tel +49 7681 21-0 Fax +49 7681 21-449 contact@guetermann.com 352058 1003602.2718/2.

www.guetermann.com

