



EN



Degree of difficulty

Instruction **BELT BAG**

Instruction **BELT BAG** size 22 x 12 x 9 cm (l x h x d)



Materials from Gütermann

- Sew-all thread in matching colours
- Cotton fabric 145 cm wide, Collection COSY MOOD:
- 0.20 m flower ornament in red-orange-white
- 0.20 m pink cotton fabric
- 1.0 m velvet ribbon in light brown, 1 cm wide
- HT2 textile adhesive

In addition

- 0.40 m fabric insert G 710, 90 cm wide
- 0.35 cm silver endless zipper in pink (with plastic teeth)
- with 2 silver coloured deco pulls
- 1.0 m pink belt band, 3 cm wide
- Silver buckle for 3 cm wide belt
- 2 silver belt rings with fixed centre bar for 3 cm wide belt

Tools

- Sewing machine
- Iron and pressing cloth
- Scissors
- Ruler
- Tape measure
- Tailor's chalk or textile marker
- Pins

Preparation

Trace the cut parts with the markings on folded cut paper, placing the fold at the folded edge. Cut and unfold.

Cutting

- Flower ornament: 1x each front, back and lid in the fold
- Pink coloured fabric: 1x each front, back and lid in the fold
- Fabric insert: 2x each front, back and lid in the fold

Cut all parts, leaving 1 cm seam allowance.



1. Place a damp cloth over the insert and press all cut pieces on the left side of the fabric insert. Press in 12-second increments, do not let the insert slide. Allow the parts to cool for 30 minutes while lying flat, so that they adhere better.



2. Lay the front sides of the outer and lining pockets right side to right side. Place the zipper ribbon in between, along the straight edge, with the teeth pointing in the direction of the rounding of the pocket. Pin the parts on top of each other. Using the zipper foot, stitch along the teeth to make it easier to sew in the sliders in the overhanging zipper. Lay the front sides left to left and iron the seam along the zipper.



3. Place the zipper tape between the outer and lining covers along the rounded edge and pin. Use the zipper foot to sew the zipper close to the teeth. Fold both parts left to left and press the seam along the zipper seam. Move the pull to the centre and cut away the protruding zipper.




4. Place the belt in the middle of the band. Stich on both sides, close to the edges. Cut into a 30- and 70-cm section. Glue the cut edges with HT2. *Slip a belt ring on the end of the 70 cm long belt, put it around the bridge of the ring and form a 4 cm long loop. Fix the loop in place with 2 seams (left ring, photo). Push the long end of the belt from back to front on the closure half of the clasp, then back through the previously sewn belt ring from back to front over the bar and back again. Now the front of the ring and the half of the closure are on the front of the belt.* Place the matching part of the belt buckle as shown between the ** on the short section of the belt.



5. Put the belt sections left to right between the markings on the back of the outer fabric, making the shorter section on the left side. Close the cut edges of the belt with the cut edges of the back side. Put the back side right to right on the rounded edge of the front side and pin the edge of the cover in place (note the marking points). Keep the extra width of the back between points B-C-B. If necessary, stitch a simple row seam at this point and lightly tighten the lower threads; alternatively, push the excess of the fabric when stitching. Close the seam, stitching over the zipper ends and including the belt bands.



6. Do the seams of the bag without the belt bends in the same way, leaving an approx. 10 cm long turning slot at the lower edge between the back and the front. Cut back the seam allowances and cut into the curves. Turn the bag right side out. Flatten and press all seams. Put the open slit edges left to left and stitch together from the right or close with hand stitches. Adjust the width of the belt with the belt rings.

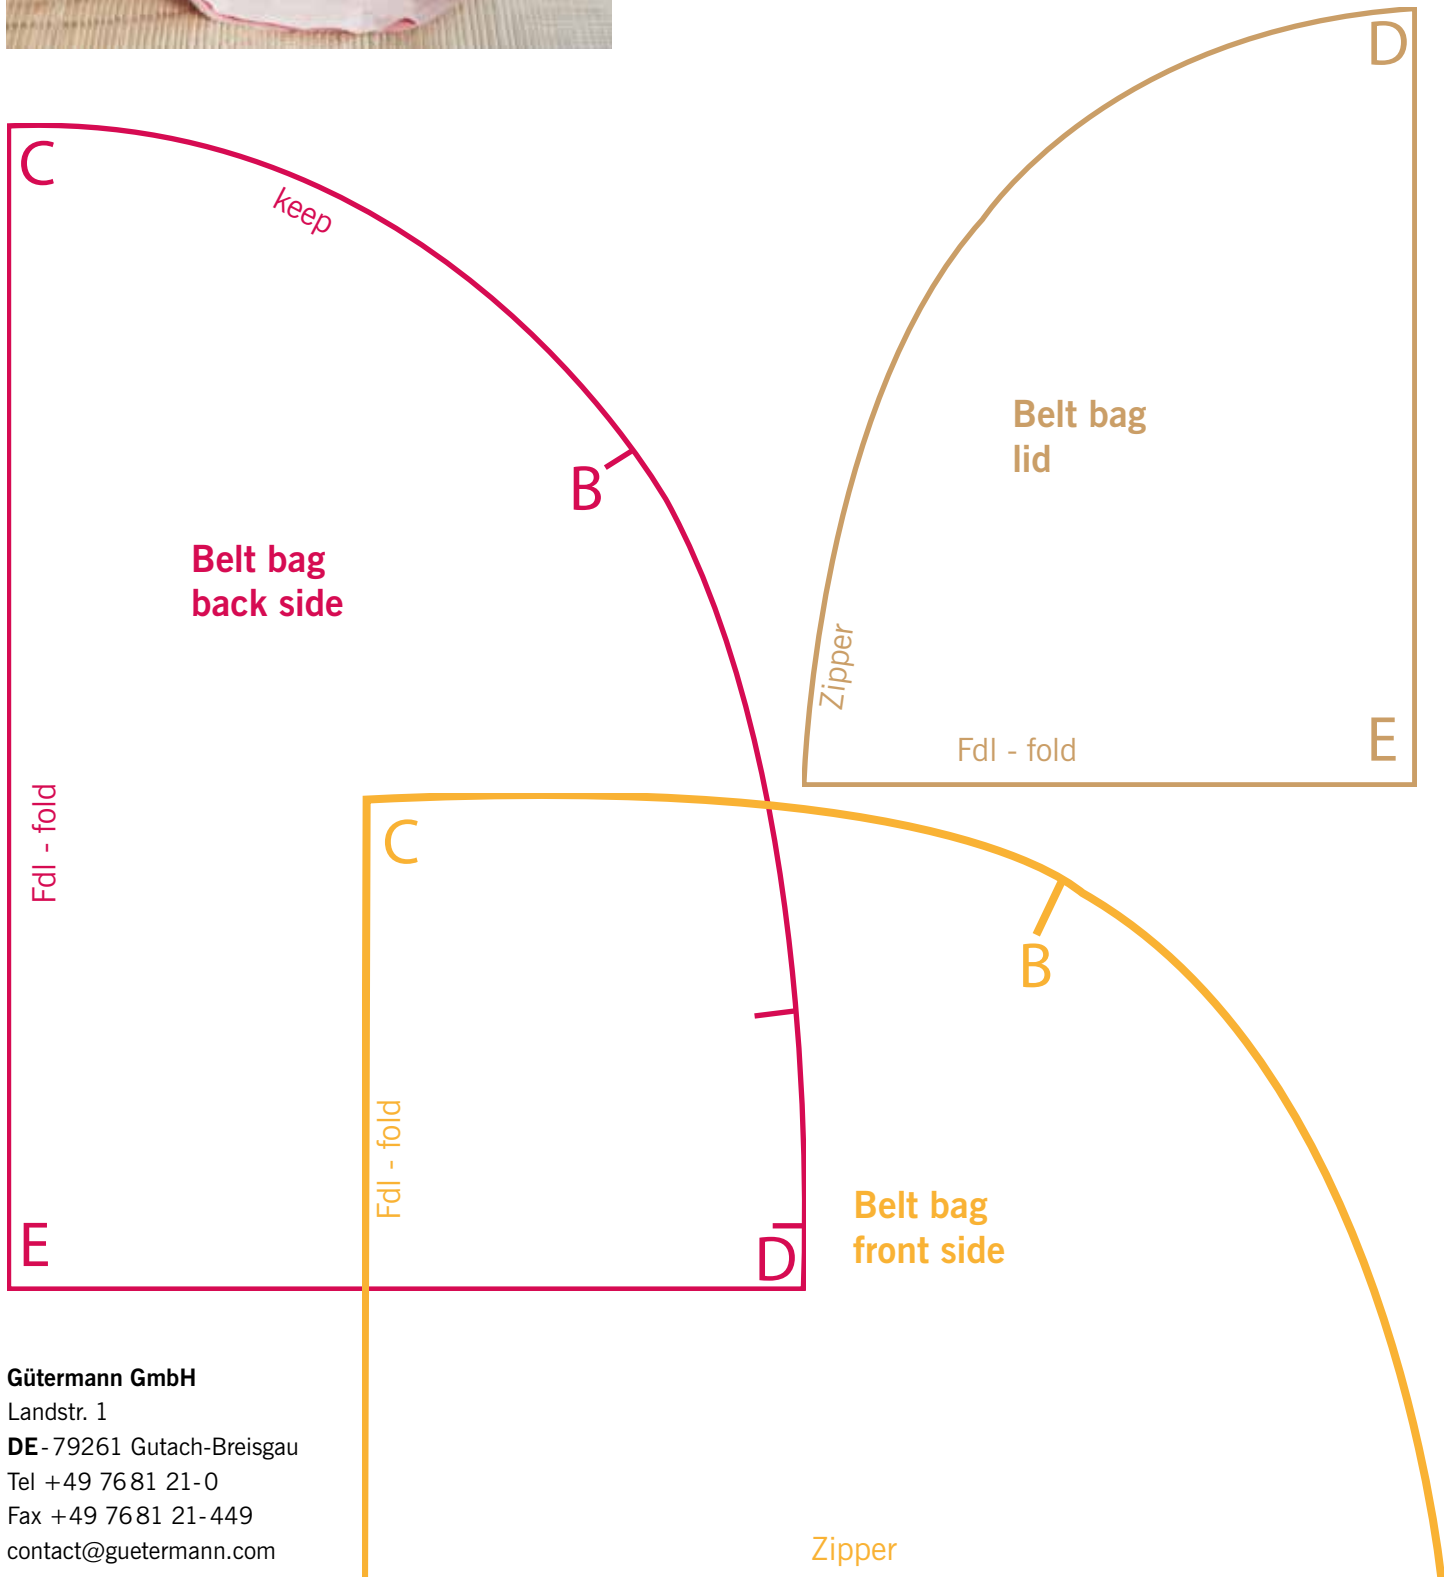

Gütermann GmbH
 Landstr. 1
 DE- 79261 Gutach-Breisgau
 Tel +49 7681 21-0
 Fax +49 7681 21-449
 contact@guetermann.com