



# Instruction **MOBILE PHONE SHOULDER BAG**



## Materials from Gütermann

- Sew-all Thread in matching colours
- Cotton fabric 145 cm wide, Collection LIGHT BREEZE:
- 0.30 m kaleidoscope pattern in rosé/grey/light green
- 0.20 m cotton fabric in rosé
- 0.10 m corded ribbon in rosé

## In addition

- 1.50 m cord in mint with Ø 6 mm
- Silver-coloured key lock, 26 x 30 mm (e.g. by Prym)
- 2 silver-coloured half rings, 2 cm wide
- 2 silver-coloured cord ends, 8 mm x 10 mm
- 0.20 m volume fleece H 630, 90 cm wide
- 0.20 m fabric inlay G 700, 90 cm wide
- Pattern paper

## Tools

- Sewing machine
- Iron
- Scissors
- Ruler
- Measuring tape
- Tailor's chalk or textile marker pen
- Pins
- Hammer

**Size: 9 cm x 16 cm x 2 cm**


## Pattern pieces

Draw the flap and the bag on paper following the diagram. Cut these pieces out and mark the central point for the motif.

## Cutting

- Kaleidoscope pattern: bag on the fold (1x); flap (1x); Attention: lay the centre point on the centre of the fabric pattern; cord stopper 7 cm x 3 cm (1x)
- Cotton fabric: bag on the fold (1x); flap (1x); cord stopper 7 cm x 3 cm (1x)
- Fabric inlay and volume fleece: bag on the fold (1x each); flap (1x each); cord stopper 7 cm x 3 cm (1x each)

Cut all parts to size with a seam allowance of 1 cm.

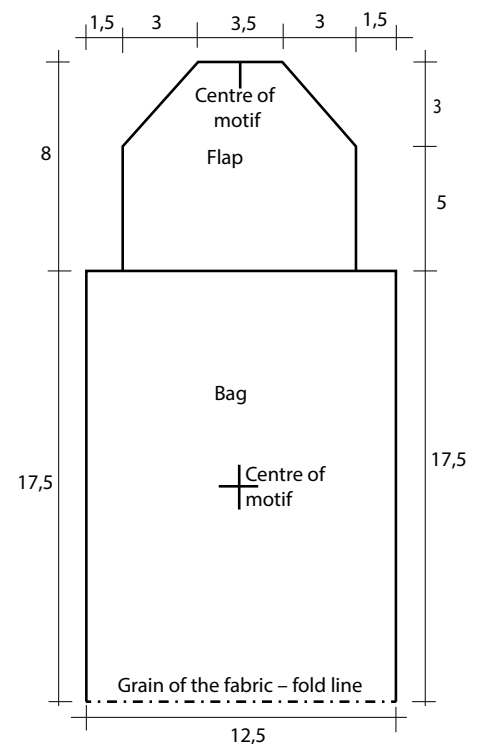



**1.** Lay volume fleece onto the reverse side of the fabric for the outer bag, the outer flap and the cord stopper in cover fabric, with the coated side against the fabric. Lay the fabric inlay onto the lining pieces, also here with the coated side against the fabric. Cover with a damp cloth and press down with the iron for 12 seconds at a time without pushing the iron. Lay down flat all pieces and leave them to cool for approximately 30 minutes.



**2.** Lay the flap pieces together with the right sides facing and pin the edges together. Stitch the side edges and the point together. Trim the seam allowances and cut across the corners. Turn the flap and form the edges and corners, ensuring symmetry. Iron the flap.



**3.** Fold the bag in cover fabric along the fold line with the right sides together and iron the fold line to mark it. Pin the side edges together. Stitch the seams on both sides. At the bottom corners fold the side seam away from the lower corner to the ironed fold edge. Pin the triangle that is formed in this way together. Mark a line at right angles to the seam (pink cross line), 1.2 cm away from the point. Stitch the bottom corner along this marked line. Trim the excess seam allowance close to the seam. Work the second bottom corner in the same way. Turn the cover fabric bag inside out and form the edges. Sew the lining bag with the bottom corners in the same way as the cover fabric bag, leaving an 8 cm turning slit on one side seam.



**4.** In order to turn the bag pin the flap, right sides together, to the back outer bag. Fold 2x 5 cm corded ribbon sections in half and push a half ring onto each, stitching the ends of the strips of corded ribbon together. Pin the ends of the corded ribbons to the upper edge of the bag on both sides of the flap, flush with the cut edge and at the same time centrally above the side seams. Slide the lining bag over the outer bag with the right sides together and the corners and side seams exactly above one another. Stitch the seam along the upper edge of the bag, catching the flap and the ends of the two corded ribbons.



**5.** Turn the bag through the slit in the lining. Pin the open edges of the slit together and stitch close to the edge or by hand. Push the lining into the bag. Iron around the top edge, pulling the flap out.



**6.** Lay both pieces for the cord stopper together with right sides facing. Stitch them together along the 7 cm edges on both sides. Trim the seam allowance and turn the strip inside out. Iron the edges and neaten the open cut edges. Insert the cord through the half rings on the bag. Fold one neaten edge on the stopper strip over one end of the cord with approximately 2 cm protruding. Stitch close to the cord using a zipper foot but do not catch the cord. Now fold the other end of the stopper over the second end of the cord and stitch close to the cord as with the first. The cords should be tight and just be able to be slid. Attach the silver cord end-pieces over the ends of the cord. Knot the cords and cut them off close to the knot.



**7.** Slide the upper half of the key lock centrally over the point on the bag flap. Mark the hole in the middle. Remove the key lock. Use a hole punch to punch out the hole, slide the key lock over the point again. Insert the rivet into the hole from the front, attach the cover to the back and knock it into place with the hammer. Lay the flap over the bag in order to mark the location of the lower half of the closure. It should be above the central point of the fabric motif. Press the points on the lower section of the lock through the layers of fabric to the inside. Lay the plate behind it and fold the points over the plate.

## Gütermann GmbH

Landstr. 1

DE- 79261 Gutach-Breisgau

Tel +49 76 81 21-0

Fax +49 76 81 21-449

contact@guetermann.com