



EN



Degree of difficulty

Instruction **HOBO BAG**

# Instruction **HOBO BAG** size 35 cm x Ø 24 cm



## Materials from Gütermann

- Sew-all thread in matching colours
- Cotton fabric 145 cm wide, Collection ELEGANT SPIRIT:
- 0.50 m chrysanthemum pattern, dark green
- 0.40 m cotton fabric, light blue
- 12 Tropic Beads, light blue, Ø 12 mm
- HT2 Textile glue

## In addition

- 0.80 m batting H 630, 90 cm wide
- 0.80 m fusible fabric lining for G 700, 90 cm wide
- 0.25 m style-vil insert, 72 cm wide
- 3.00 m satin cord, light blue, Ø 4 mm
- 2 silver-coloured half rings, 25 mm wide
- 8 silver-coloured eyelets, Ø 15 mm
- 0.70 m cord, Ø 15 mm
- Cutting paper

## Tools

- Sewing machine
- Iron
- Scissors
- Compass
- Sewing ruler
- Tape measure
- Tailor's chalk or fabric highlighter
- Pins

## Cutting piece

- Draw the bottom onto the cutting paper using the compass.

## Pre-cut pieces

- Chrysanthemum pattern: 1x outer bag 38 cm x 76 cm, 1x bottom
- Cotton fabric, light blue: 1x lining bag 32 cm x 76 cm, 1x lining bottom, 1x strap 5 cm x 78 cm, 2x strap fixing 52 cm x 5 cm
- Batting: 1x outer bag 38 cm x 76 cm, 1x bottom
- Fabric lining: 1x lining bag 32 cm x 76 cm, 1x bottom
- Style-vil: 1x bottom (without seam allowance)

Cut all parts to size with a seam allowance of 1 cm.



**1.** Place the batting on the left fabric sides of the bottom and the outer bag. In order to do this, place the coated side downwards onto the reverse sides of the fabric. Cover with a damp cloth and press it on at intervals of 12 seconds. Be sure not to push. Let the parts cool off for 30 minutes after fixing them, placing them on a flat surface. Additionally fix style-vil on the bottom using textile adhesive. Place the fabric lining on the left fabric sides of the light blue bottom and the lining bag and fix them using the iron and a damp cloth, just as you did with the batting.



**2.** Place the shoulder strap lengthways, right sides together, and quilt the seam in the width of the seam allowance. Iron the seam allowances apart and turn the strip using a loop turner. Iron again. Draw the cord into the shoulder strap using a safety pin, so that 4 cm plus seam allowance protrude from the strap on both sides.

**Tip:** Drawing in the cord is easier if the cord ends are tightly wrapped with adhesive tape. Fold the ends of the strip to the inside in the width of the seam allowance. Topstitch the open edges close to the edge.



**3.** Place both strap fixing strips lengthways, right sides together. Topstitch one end at a time in an inclined fashion and, as you continue, topstitch the longitudinal seam. Cut back the protruding seam allowances, turn the strip and iron it. Fold the open ends towards the inside and iron them.



**4.** Fold the upper longitudinal edge of the outer bag cutting piece 3 cm wide plus seam allowance to the left and iron it. Unfold the pleat again. Place the outer bag along the lateral edges, right sides together. Topstitch the vertical bag seam and iron the seam allowances apart. Pin the lower edge of the outer bag to the outer bottom cutting piece, right sides together. Stitch the seam on both sides. Cut back the seam allowances and cut them in vertically. Handle the lining bag without the upper edge in the same way, leaving an opening of approx. 15 cm on the vertical bag seam for turning.



**5.** Stitch and then turn the lining bag with the outer bag. For this purpose, place the lining bag into the outer bag, right sides together. The upper edges are lying on top of each other as well as the lateral seams. Stitch the seam from both sides, iron the seam allowances apart. Now turn the bag through the opening in the lining. Slide the lining in the direction of the bottom. The fabric of the outer bag will fold inwards along the pleat that is 3 cm wide. Iron the upper bag edge. Fold the open edges of the opening in the lining so that they are flush with each other and topstitch them close to the edge or close them by hand stitches. Slide the lining bag into the cover fabric bag, the seams lying on top of each other congruently.




**6.** Iron the upper edge of the bag. Mark the position of the eyelets on the bag as specified in the schematic drawing. Drive in the eyelets according to manufacturer specifications using the tool enclosed and a hammer.



**7.** Pin the strap fixing strips to the outside of the bag opposite each other as specified in the schematic drawing. Topstitch them close to the edge through all fabric layers. Lay the strip around the straight edge of the half ring at the upper end, fold the strip downwards onto the stitched-on strip. With a distance of 3 cm to the ring, quilt the loop several times through both layers of the strap strips and the bag that is lying underneath. Fasten the bevelled end of the strip that is hanging loosely by knots. Take one of the ends of the strap at a time and fold it (with cord) over the rounding of the half ring with a width of 3 cm and stitch it down by hand stitches or quilt it using the machine, taking the cord ends in the interior along.



**8.** Cut the satin cord into 3 sections of 1 m each, fusing all ends with a lighter. String 4 beads onto each cord and fasten the cord beginning with a knot directly behind the beads. Now fasten all 3 cords together with a knot above the beads. String the 3 cords through one of the two front eyelets and continue stringing them upwards and downwards through the other eyelets. After the last eyelet, lay a loop of a length of approx. 10-15 cm and fasten the cords to each other with knots. Slide the cord end with the beads through this loop as termination.

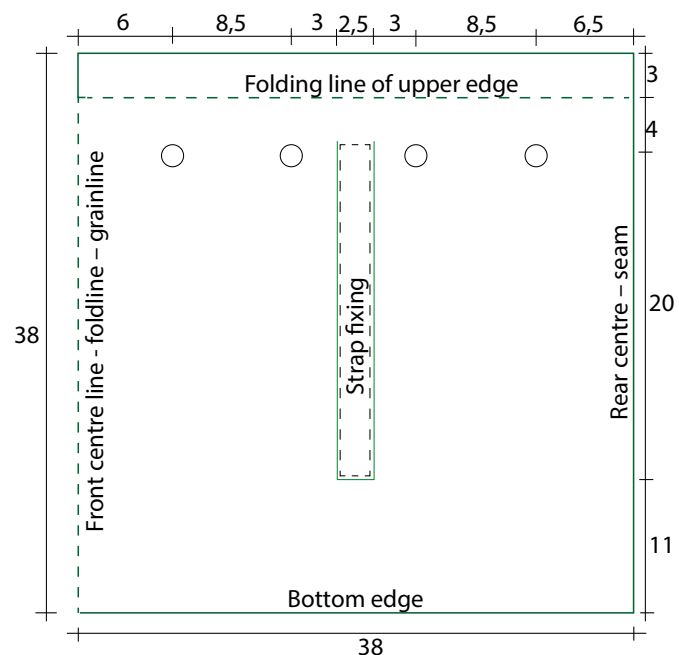

**Gütermann GmbH**

Landstr. 1

DE - 79261 Gutach-Breisgau

Tel +49 76 81 21-0

Fax +49 76 81 21-449

contact@guetermann.com