



EN



Degree of difficulty

Instruction **PLACEMAT WITH NAPKIN**

Instruction **PLACEMAT WITH NAPKIN**



Materials from Gütermann

- Sew-all thread in matching colours
- Cotton fabric 145 cm wide, Collection ELEGANT SPIRIT :
- 0.30 m peacock design, bottle-green and multicoloured
- 0.40 m cotton fabric, bottle-green
- 0.50 m tile pattern, dark green and mint

In addition

- 0.40 m batting H 630, 90 cm wide
- 0.40 m fusible fabric lining G 700, 90 cm wide
- Silver-coloured belt buckle with bar 2.5 cm x 3.5 cm

Tools

- Sewing machine
- Iron
- Scissors
- Sewing ruler
- Tape measure
- Tailor's chalk or fabric highlighter
- Pins

Size

Placemat 42 cm x 31.5 cm

Napkin 38 cm x 38 cm

Fabric consumption

The fabric provided suffices to make 3 placemats and 3 napkin, the batting and the fabric lining are sufficient for 2 placemats.

Pre-cut pieces

- Peacock pattern: 1x front A 30 cm x 24.5 cm, 1x strip B 5 cm x 24.5 cm
- Cotton fabric bottle-green: 2x front C 3.5 cm x 24.5 cm; 2x front D 42 cm x 3.5 cm; 1x reverse side E 33.5 cm x 31.5 cm; 1x reverse side F 5 cm x 31.5 cm, 1x reverse side G 3.5 cm x 31.5 cm; closing strip 28 cm x 7 cm
- Tile pattern: 41 cm x 41 cm (incl. 1.5 cm seam allowance)
- Batting: 1x front A 30 cm x 24.5 cm, 1x strip B 5 cm x 24.5 cm, 2x front C 3.5 cm x 24.5 cm; 2x front D 42 cm x 3.5 cm
- Fabric lining: 1x reverse side E 33.5 cm x 31.5 cm; 1x reverse side F 5 cm x 31.5 cm, 1x reverse side G 3.5 cm x 31.5 cm

Cut all parts with 1 cm seam allowance.



1. Fold and iron 2 opposing edges of the napkin at 0.5 cm to the left fabric side in succession. Again fold 2 opposing edges to the left fabric side with a width of 1 cm, pin them using needles and iron them. Topstitch the seam of the napkin close to the edge on both sides. Iron the serviette.



2. Apply the batting with the coated side facing downwards onto the reverse sides of parts A, B, C, and D. Cover with a damp cloth and press it on at intervals of 12 seconds, be sure not to push. Let the parts cool off for 30 minutes after fixing them, laying them flat on a surface. Apply the fabric inserts so that they are flush with the reverse sides of parts E, F, and G, and press them on with the iron just as was done with the batting. Also let these parts cool off for 30 minutes while they are placed flat on a surface.



3. Fold the closing strip lengthwise, right sides together. Mark a 45 degree angle from the foldline on one end. As you continue, stitch the longitudinal edge of the strip in the width of the seam allowance. Cut back the seam allowances and bevel them at the corner. Iron and turn. Shape the strip and iron it again. Fold the open cutting lines inwards and iron them. Place the straight end of the strip around the bar of the belt buckle and topstitch it with a distance of 3 cm to the bar, closing the open edges at the same time.



4. For the front of the placemat, place the patterned part A on part B, right sides together. Mark the position of the opening. Stitch the seam in front of and following the opening, then consistently iron the seam allowances apart. Place strip C on strap B, right sides together. Mark the opening at the same height as between A and B. Close the seam in front of and following the opening, consistently iron the seam allowances apart. In a last step, place strip C on the left edge of the front side, right sides together and close the seam. Iron the seam allowances apart.



5. Place and pin strip D along the upper and lower edge of the front side, right sides together. Quilt the seams in the width of the seam allowance and iron them apart.




6. For the reverse side, handle the seams between parts E and F, then F and G with an opening just as on the front side, also ironing the seam allowances apart. Place the front and reverse side on top of each other for the purpose of testing and check whether the openings are lying exactly on top of each other.



7. Place the front and reverse side right sides together and pin them from both sides. Stitch the seam along the outer edges, providing for an opening of approx. 10 cm on the lower edge for turning. Cut back the seam allowances and bevel them at the corners. Turn the placemat through the opening provided. Shape the edges and corners well and iron them again. Close the opening by hand stitches and also sew the edges of the opening together, which are lying on top of each other.



8. Topstitch the placemat on both sides along the frame edges of 3.5 cm from the front side in the ditch. Draw the closing strip through the edges of the opening from the front left to the back and to the front again. Fold the napkin, place it on the closing strip and close it like a belt.

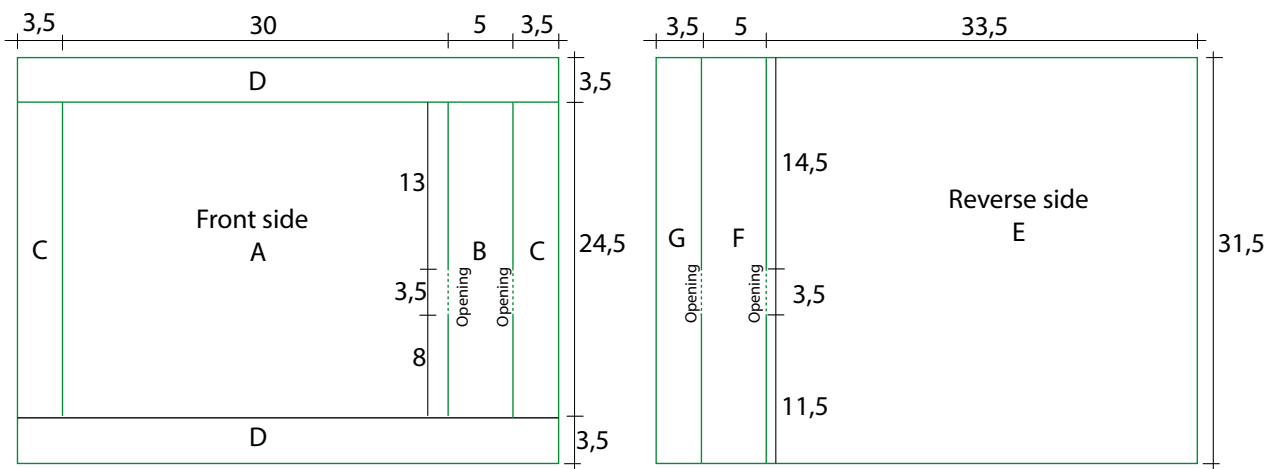

Gütermann GmbH

Landstr. 1

DE- 79261 Gutach-Breisgau

Tel +49 7681 21-0

Fax +49 7681 21-449

contact@guetermann.com