



# Instruction **BAG** approx. 42 x 37 cm



#### Materials from Gütermann

- All-purpose sewing thread in a matching colour
- Decorative stitching thread in a matching colour
- Cotton fabric 145 cm wide, Collection MARRAKESCH:
- 0.40 m rosette pattern in dark blue-multicoloured
- 0.50 m graphic print in dark blue-white
- 6.00 m velvet ribbon in dark blue, 9 mm wide
- 12 metal beads, silver coloured, Ø 5 mm

### In addition

- 0.40 m volume fleece H640, 90 cm wide
- 0.80 m fabric lining G700, 90 cm wide
- Bag base by Prym made of raffia
- Bag handle by Prym made of bamboo with Ø 24 cm
- Long sharp hand-sewing needle
- Card of approx. 7 x 5 cm


### Tools

- Sewing machine
- Iron
- Scissors
- Tape measure
- Tailor's chalk or textile marker pen
- Pins

## Cutting

- Rosette pattern: 35 x 42 cm 2x (outside), 19 x 24 cm 2x (inner bag)
- Graphic print: 44 x 42 cm 2x (lining)
- H640: 35 x 42 cm 2x (outside)
- G700: 44 x 42 cm 2x (lining), 19 x 24 cm 1x (inner bag)

Cut all sections with 1 cm seam allowance, with the grain always running parallel to the cut edges.

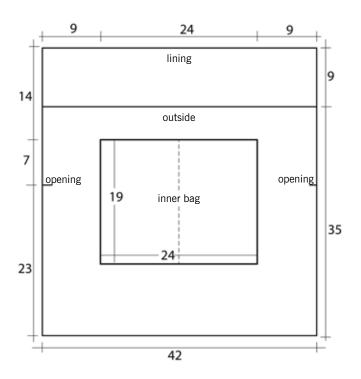





1. Iron the fabric lining to the wrong side of both lining and bag sections, and the volume fleece to the reverse of the upper fabric. Lay the inner bag sections right sides together. Sew the 1 cm seam all around while leaving a 5 cm opening for turning. Trim the seam allowances and cut off the corners at an angle. Iron the seam and turn the bag. Form the edges, fold the seam allowance to the inside at the opening and iron. Pin the inner bag to the lining fabric 14 cm away from the top and with 9 cm distance to each side, with the edge without the opening facing upwards. Sew along the side and lower edges close to the edge, closing the opening. Sew a central, vertical dividing line.



**2.** Lay the two sections for the outside with right sides together. Pin the edges together from the lower edge to the opening on both sides. Sew the seams, iron the seam allowances open. Clip the seam allowances vertically at the opening to just before the seam. Sew the lining together in the same way and iron.



**3.** Pin the lining back to the outer bag with right sides together so that the seams are exactly aligned up to the opening. No close the seams on the lining to the upper fabric along the opening edges on both sides from the top to the slit, lock the ends. Turn the bag and iron the sections along the opening. Trim the cut edges along the overhanging lining fabric. Fold and iron the vertical edges to a width of 1 cm to the wrong side. Stitch the seam allowances to a width of 0.7 cm, then onwards stitch together the edges of the opening close to the edges.



**4.** For the handle casing fold the upper edge of the lining fabric to the outside to a width of 4.5 cm. Iron the fold line. Do the same on the back of the bag. Pin the velvet ribbon over the cut edge at a width of 0.5 cm and sew it in place close to the upper edge. Lay the handle into the casing. Pin the lower edge of the casing (velvet ribbon) onto the inside of the bag, tack if necessary. Sew the seam close to the edge along the velvet ribbon, smoothing out the fabric at regular intervals.





**5.** Trim the lower cut edges of the outer and lining fabrics, joined together all around, cut back the seam allowances. Slide the bag base over the fabric bag with an overlap of 1 cm and with the side seams on the centre lines of the base oval. Sew the base onto the fabric bag using dark blue decorative thread and backstitch.



**6.** For the 7 cm tassels wrap the velvet ribbon flat around the card 9 times. Insert a strong thread under the wrapped ribbon and knot it firmly, then remove the card. Cut through the wrapped ribbons on the opposite side. Wrap the head with velvet ribbon approx. 2 cm from the top and sew the ends together. Make 4 tassels, join each set of 2 with a bead string comprising 6 beads and sew each set to the opening ends on the bag.

Gütermann GmbH

Landstr. 1 **DE**-79261 Gutach-Breisgau

Tel +49 7681 21-0

Fax +49 7681 21-449

contact@guetermann.com